 








Status display



The first menu you will see after switching your AeroFlow® heater will show the current time on the top left (for setting see page 6). The large temperature next to the thermometer icon shows the current room temperature. The small temperature in the lower right corner shows the target temperature.

Depending on the program setting, the following icons are visible:

-  = Manual mode (program mode Off). The target temperature will be controlled via the arrow buttons.
-  = The AeroFlow® heater is in program mode (see page 4/5).
-  = The radiator is about to warm the room. As soon as the set room temperature is reached, this symbol disappears.
-  = Open window detected, the AeroFlow® heater is temporarily switched off.
-  = Holiday Mode: The digit below the icon indicates the number of remaining holidays (see page 5).
-  = Keylock/Childlock ON (to enable/disable press both arrow buttons simultaneously for min. 5 sec.).

NOTES:

 
If the clock symbol (program mode) is not displayed, lower or raise the target temperature by using the arrow buttons. The AeroFlow® heater will always hold this temperature.

In case the program mode is enabled (the clock symbol is displayed), the target temperature can also be lowered and raised with the arrow buttons. The manually set target temperature overrides the program mode until the next preset start or end time of a time frame. The AeroFlow® heater returns to programming mode after then.


To turn the heater off, keep the OK button pressed for at least 5 seconds.

"Standby" will be displayed. Power consumption in standby mode below 0.1 watts.

Temperature-Overview



 
The display view changes after 5 seconds without pressing a button. The current temperature is displayed on top and the target temperature at bottom.




In this menu you can change or view your heating times.

You don't see this menu item?

 Enable the programming mode in the configuration menu by switching "Programs" to "ON".



 Select this menu if you want to view the heating plan. You can not make changes in this menu item.




Select the day of the week for which you want to see the heating plan.

Start	End	Temp
00:00 - 08:00		11,0°C
08:00 - 16:00		19,0°C
16:00 - 00:00		11,0°C
--:--	--:--	-- °C
--:--	--:--	-- °C

See the heating plan on the choosen day. Press OK to exit the menu item display.



 Set a heating plan according to your preferences.



Choose the day of the week. You can select multiple, non-consecutive days. Navigate with the arrow buttons to the desired days and select them with OK. **Navigate with the arrow buttons to "Set frames" and press OK.**

Select Time Frame
00:00 - 08:00 11,0°C
08:00 - 16:00 19,0°C
16:00 - 00:00 11,0°C
--:-- --:-- -- °C
--:-- --:-- -- °C


Use the arrow buttons to select changes to a time frame. Confirm with OK.

Select Time Frame
Start time
00:00
08:00
16:00
--:--
--:--


Use the arrow buttons to select the start time for the respective time frame. Confirm with OK.

Select Time Frame
End time
05:30
00:00
08:00
16:00
--:--
--:--


Use the arrow buttons to select the end time for the respective time frame. Confirm with OK.

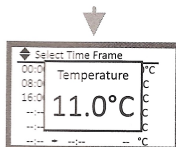

 
Use the arrow buttons to select the temperature for the respective time frame. Confirm with OK.



 After entering all desired time frames, the "arrow-down"-button must be pressed again. The "arrow-back"-symbol will appear on the display. Press OK to fully exit the programming mode now.



 Enable or disable Smart Start. When Smart Start is activated, the room will be heated up at the adjusted start time of the respective time frame. See also page 3: paragraph "Smart Start (adaptive start control)".




Turn Smart Start ON or OFF.



Use the boost function if you want to increase the room temperature quickly. Press OK to activate the boost function. During boost, the open window detection is deactivated.



 The default setting is 30:00 minutes and it will count down immediately. You do not need to press any further button. Use the arrow buttons to set how many minutes (selectable in 5-minute steps) the AeroFlow® heater will heat permanently for the preset time. Press OK to cancel the boost function.




Open the configuration menu.




Use the arrow buttons to switch the programming mode on or off. Confirm with OK. When "Programs OFF", the menu item "Programs" is not visible. Then you can lower and raise the temperature manually by using the arrow buttons in the "Status Display" menu instead of (see page 4).



 
The AeroFlow® heater is able to automatically switch off if an open window is detected. In this menu you can switch this function on or off.



 
Turn on or off the window open detection. When the window open detection is switched on, the AeroFlow® radiator switches off for not more than 16 minutes if an open window is detected. The next window open detection takes place at the earliest 20 minutes after the expiry of the 16 minutes.



 
The AeroFlow® heater can be switched into holiday mode. In holiday mode, the program (if active) is disabled for the duration of the absence. If the heater is in manual mode, the preset manual temperature is disabled for the duration of the absence.



 Use the arrow buttons to enter the number of days you are leaving.



 Use the arrow buttons to set the hour of the desired time of return. Confirm with OK. After this, set the minute of the return time and confirm with OK as well.



The return temperature is the temperature that should begin on your return. If program is active (menu "Configuration" → Programs = ON), the return temperature can not be selected. After reaching the return time the heating plan will be continued. If no time frame is active (paused heating between two time frames), the Antifreeze temperature is applied. So the heating plan continues as programmed.

If program is disabled, you can use the arrow keys to set the return temperature. Confirm with OK. The status display with the suitcase icon and the number of remaining days off will appear. The absence temperature corresponds to the Antifreeze temperature.

To change the temperature for your absence, press an arrow key in the status display. The Temperature-overview display appears. Change the absence temperature with the arrow keys and confirm with OK. To deactivate the holiday mode set "days out" to "-" (not "0"). During holiday mode you can change the Antifreeze temperature in the Antifreeze menu, but this will not be applied for the current absence.